
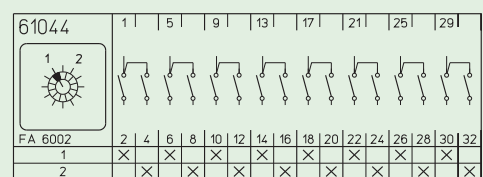
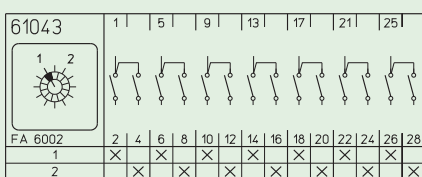
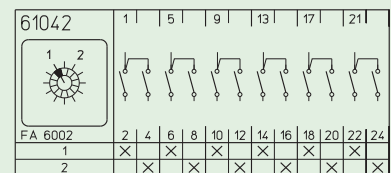
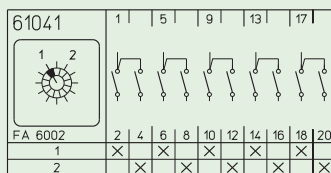
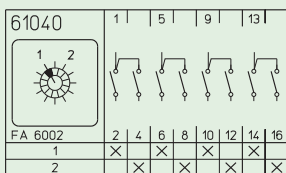
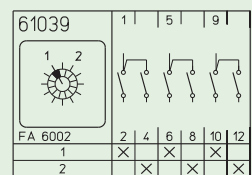
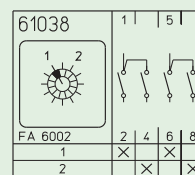
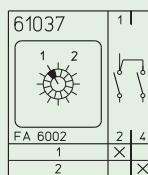
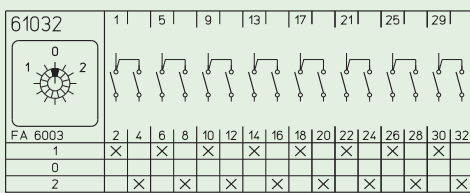
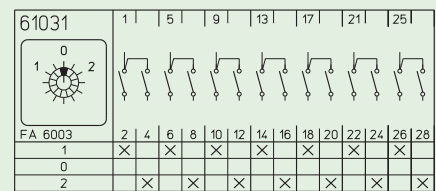
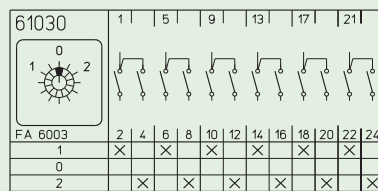
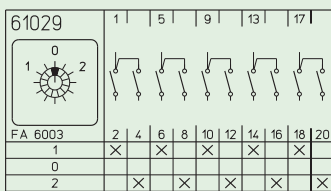
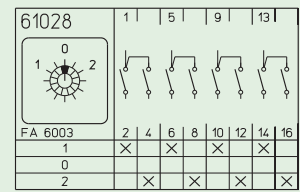
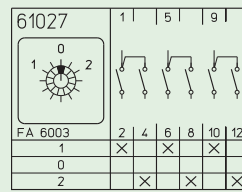
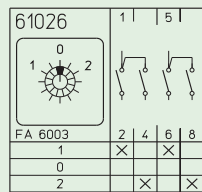
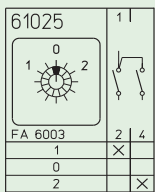
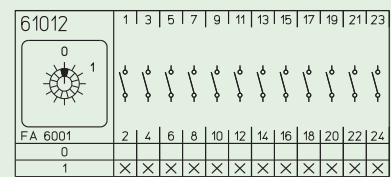
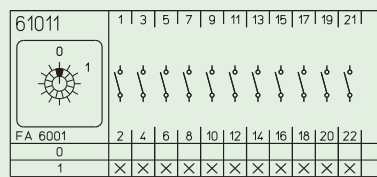
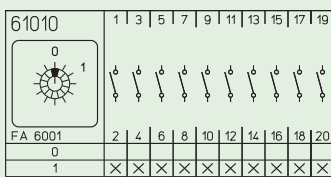
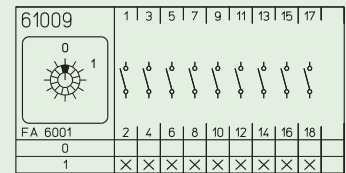
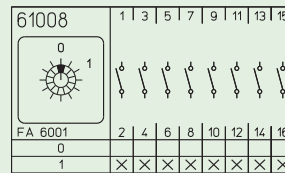
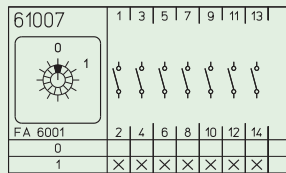
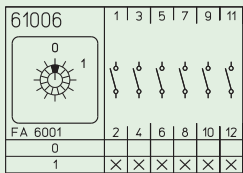
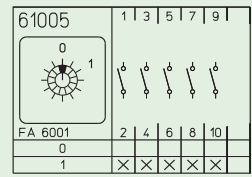
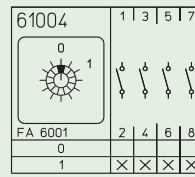
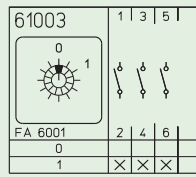
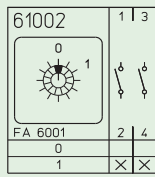


Nockenschalter

Technische Informationen Schaltbilder

Schaltbilder 61001–61044

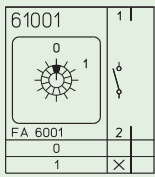

Schaltbilder 61045–61062

61045

FA 6002	2	4	6	8	10	12	14	16	18	20	22	24	26	28	30	32	34	36
1	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
2	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X

61046

FA 6002	2	4	6	8	10	12	14	16	18	20	22	24	26	28	30	32	34	36	38	40
1	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
2	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X

61047

FA 6002	2	4	6	8	10	12	14	16	18	20	22	24	26	28	30	32	34	36	38	40	42	44
1	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
2	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X

61048

FA 6002	2	4	6	8	10	12	14	16	18	20	22	24	26	28	30	32	34	36	38	40	42	44	46	48
1	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
2	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X

61049

FA 6005	2	4	6
1	X		
2	X		
3		X	

61050

FA 6006	2	4	6	8
1	X			
2		X		
3			X	
4				X

61051

FA 6007	2	4	6	8	10
1	X				
2		X			
3			X		
4				X	
5					X

61052

FA 6008	2	4	6	8	10	12
1	X					
2		X				
3			X			
4				X		
5					X	
6						X

61053

FA 3015	2	4	6	8	10	12	14
1	X						
2		X					
3			X				
4				X			
5					X		
6						X	
7							X

61054

FA 3016	2	4	6	8	10	12	14	16
1	X							
2		X						
3			X					
4				X				
5					X			
6						X		
7							X	
8								X

61055

FA 3017	2	4	6	8	10	12	14	16	18
1	X								
2		X							
3			X						
4				X					
5					X				
6						X			
7							X		
8								X	
9									X

61056

FA 3018	2	4	6	8	10	12	14	16	18	20
1	X									
2		X								
3			X							
4				X						
5					X					
6						X				
7							X			
8								X		
9									X	
10										X

61057

FA 3019	2	4	6	8	10	12	14	16	18	20	22
1	X										
2		X									
3			X								
4				X							
5					X						
6						X					
7							X				
8								X			
9									X		
10										X	
11											X

61058

FA 3020	2	4	6	8	10	12	14	16	18	20	22	24
1	X											
2		X										
3			X									
4				X								
5					X							
6						X						
7							X					
8								X				
9									X			
10										X		
11											X	
12												X

61059

FA 6020	2	4
0		
1	X	
2	X	

61060

FA 6021	2	4	6
0			
1	X		
2		X	
3			X

61061

FA 6022	2	4	6	8
0				
1	X			
2		X		
3			X	
4				X

61062

FA 6023	2	4	6	8	10
0					
1	X				
2		X			
3			X		
4				X	
5					X

Nockenschalter

Technische Informationen Schaltbilder

Schaltbilder 61063–61082

61063

FA 3008

	2	4	6	8	10	12
0						
1	X					
2		X				
3			X			
4				X		
5					X	
6						X

61064

FA 3009

	2	4	6	8	10	12	14
0							
1	X						
2		X					
3			X				
4				X			
5					X		
6						X	
7							X

61065

FA 3010

	2	4	6	8	10	12	14	16
0								
1	X							
2		X						
3			X					
4				X				
5					X			
6						X		
7							X	
8								X

61066

FA 3011

	2	4	6	8	10	12	14	16	18
0									
1	X								
2		X							
3			X						
4				X					
5					X				
6						X			
7							X		
8								X	
9									X

61067

FA 3012

	2	4	6	8	10	12	14	16	18	20
0										
1	X									
2		X								
3			X							
4				X						
5					X					
6						X				
7							X			
8								X		
9									X	
10										X

61068

FA 3013

	2	4	6	8	10	12	14	16	18	20	22
0											
1	X										
2		X									
3			X								
4				X							
5					X						
6						X					
7							X				
8								X			
9									X		
10										X	
11											X

61069

FA 6005

	2	4	6	8	10	12
0						
1	X			X		
2		X			X	
3			X			X

61070

FA 6006

	2	4	6	8	10	12	14	16
0								
1	X				X			
2		X				X		
3			X				X	
4				X				X

61071

FA 6007

	2	4	6	8	10	12	14	16	18	20
0										
1	X									
2		X				X				
3			X				X			
4				X				X		
5					X				X	

61072

FA 6008

	2	4	6	8	10	12	14	16	18	20	22	24
0												
1	X							X				
2		X							X			
3			X							X		
4				X							X	
5					X							X
6						X						X

61073

FA 3015

	2	4	6	8	10	12	14	16	18	20	22	24	26	28
0														
1	X								X					
2		X								X				
3			X								X			
4				X								X		
5					X								X	
6						X								X
7							X							

61074

FA 3016

	2	4	6	8	10	12	14	16	18	20	22	24	26	28	30	32
0																
1	X									X						
2		X									X					
3			X									X				
4				X									X			
5					X									X		
6						X									X	
7							X									X
8								X								

61079

FA 6020

	2	4	6	8
0				
1	X		X	
2		X		X

61080

FA 6021

	2	4	6	8	10	12
0						
1	X			X		
2		X			X	
3			X			X

61081

FA 6022























	2	4	6	8	10	12	14	16
0								
1	X			X				
2		X			X			
3			X			X		
4				X			X	

61082

FA 6023

	2	4	6	8	10	12	14	16	18	20
0										
1	X				X					
2		X				X				
3			X				X			
4				X				X		
5					X				X	




















Schaltbilder 61151–61215

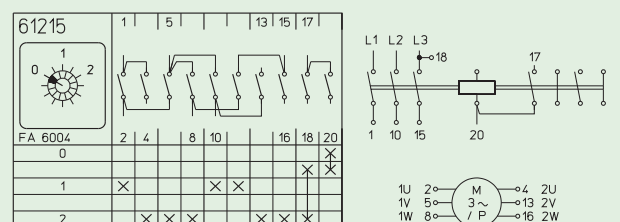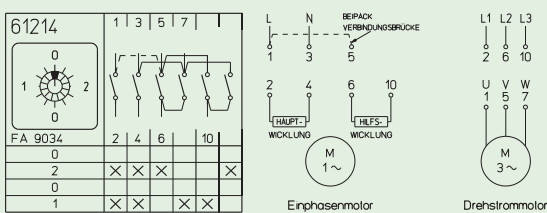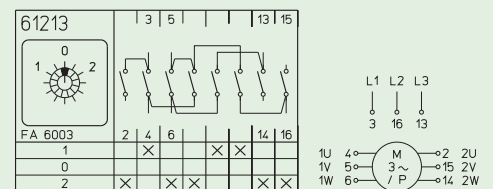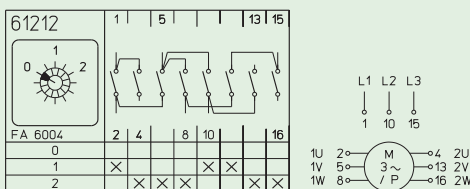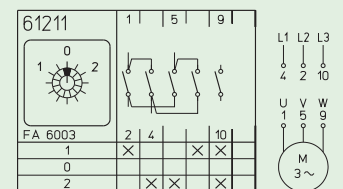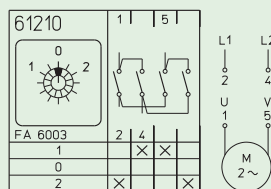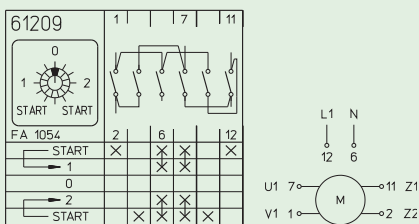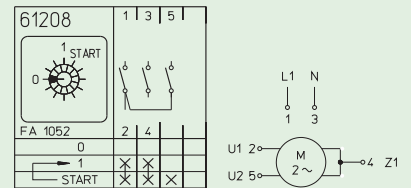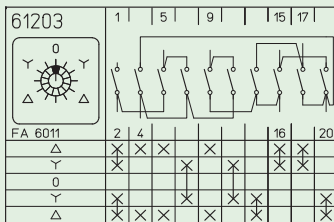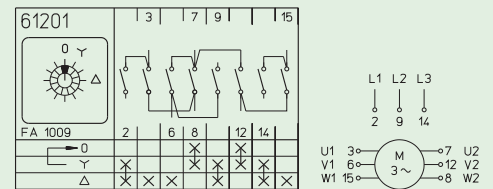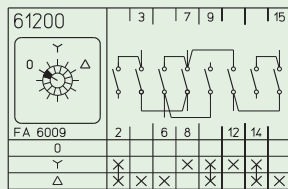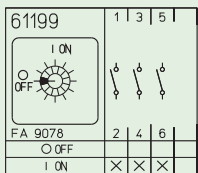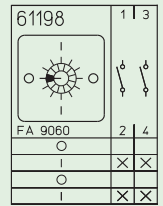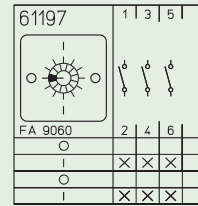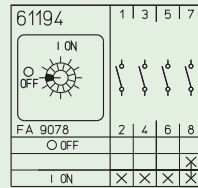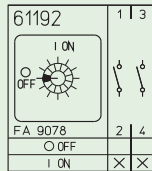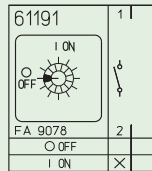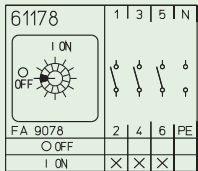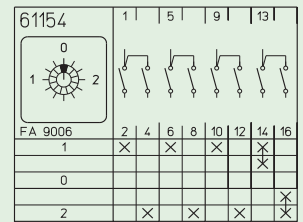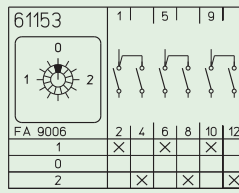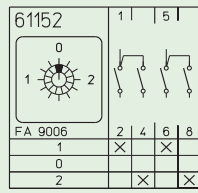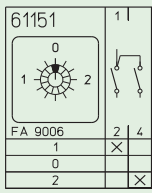















Nockenschalter

Technische Informationen Schaltbilder

Schaltbilder 61217–61313

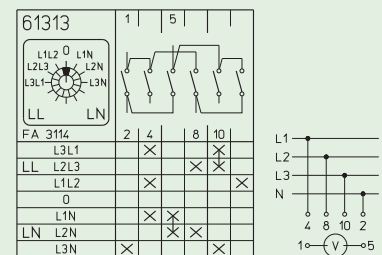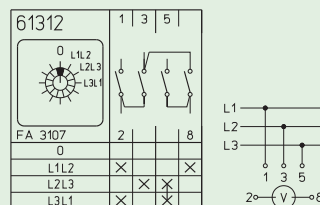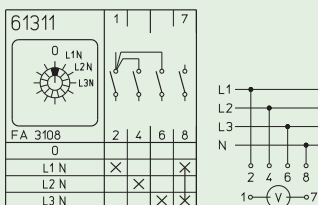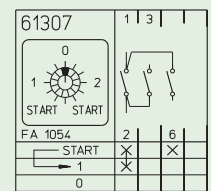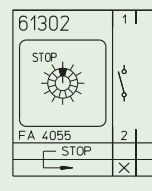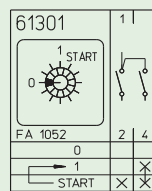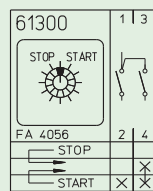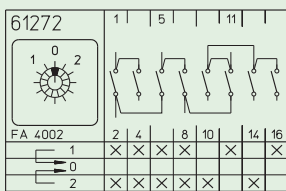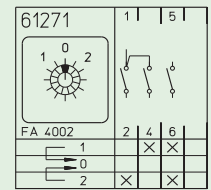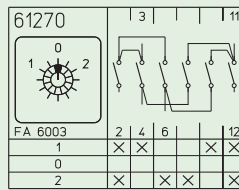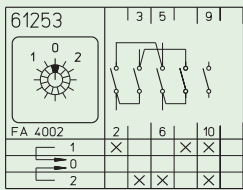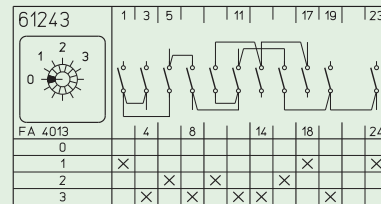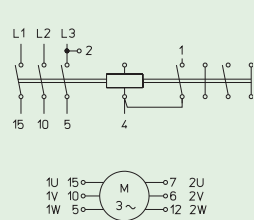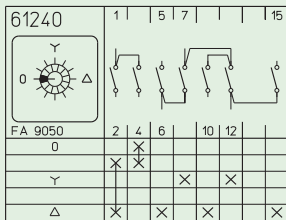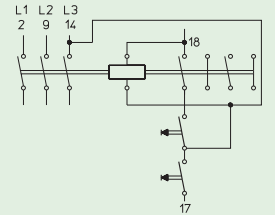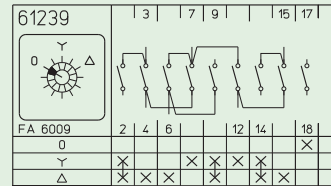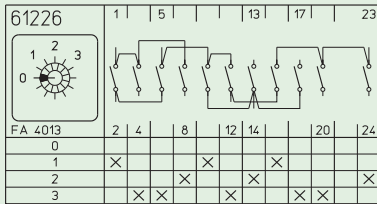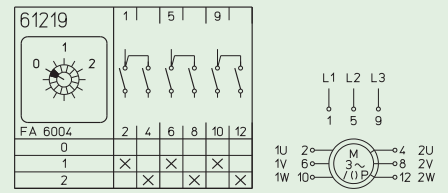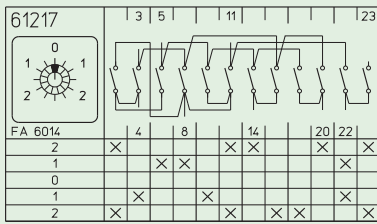





































Schaltbilder 61314–61336

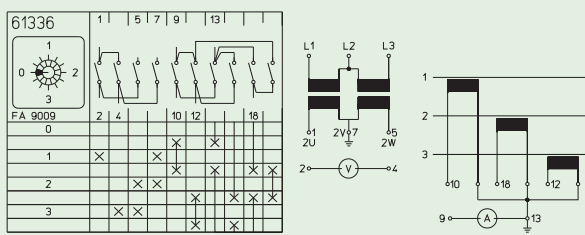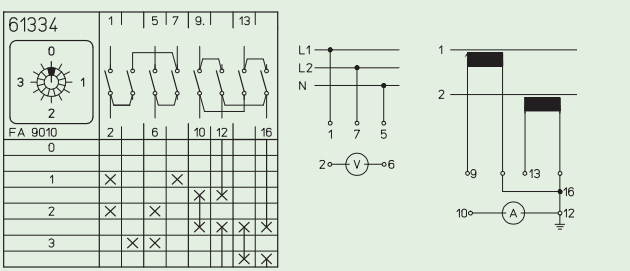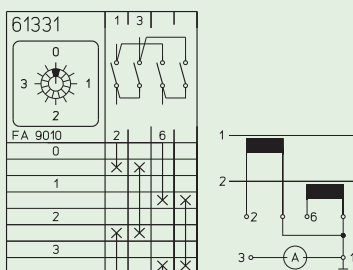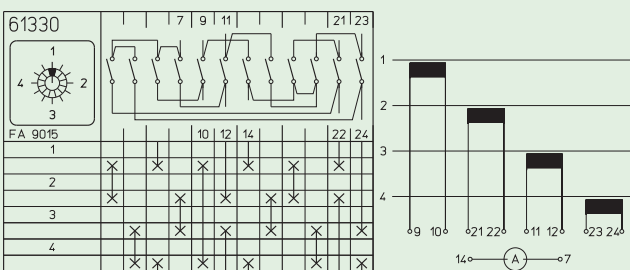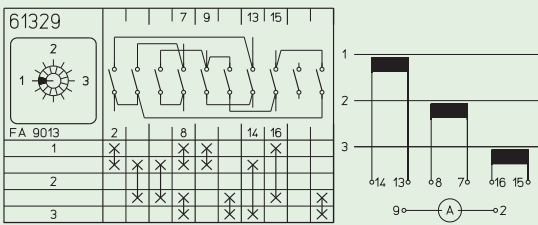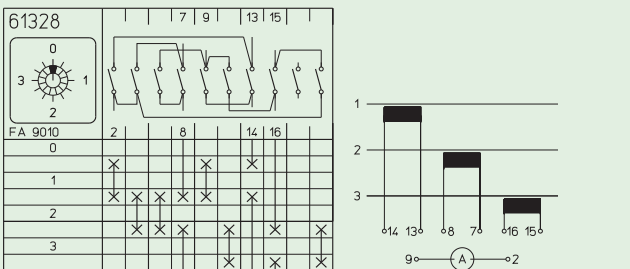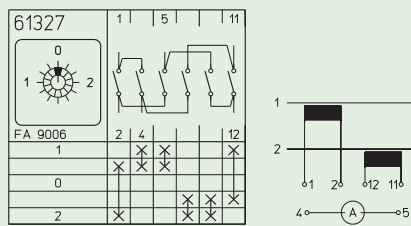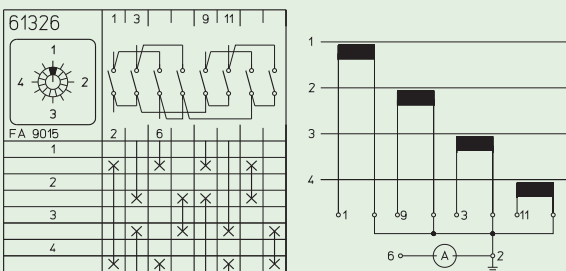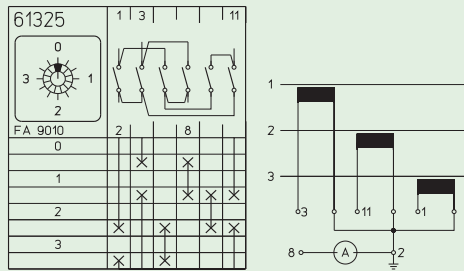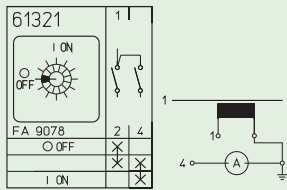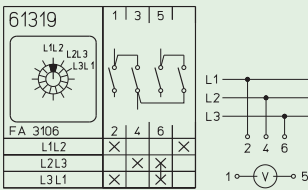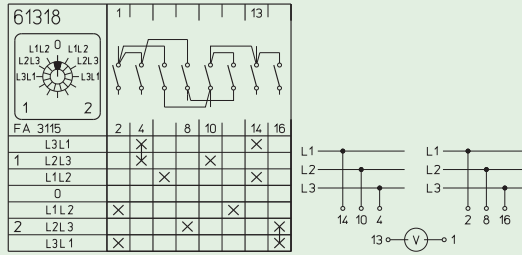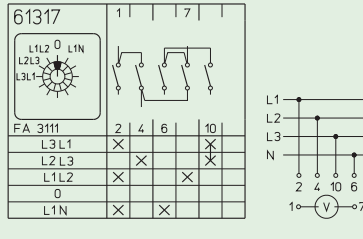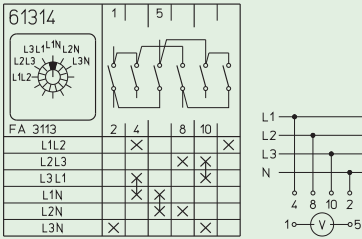

Nockenschalter

Technische Informationen Schaltbilder

Schaltbilder 61337–61707

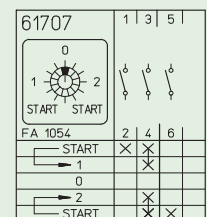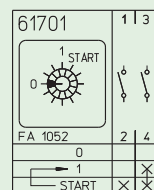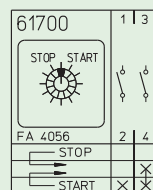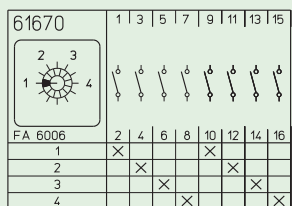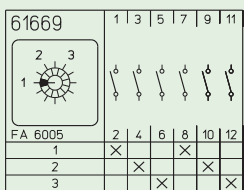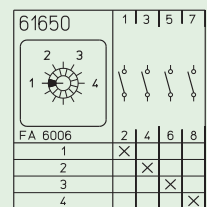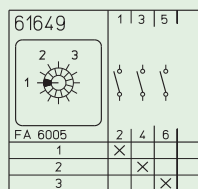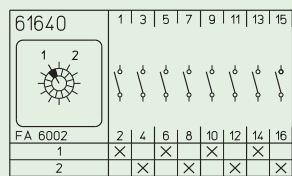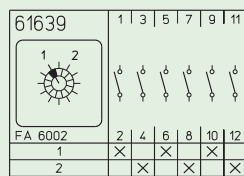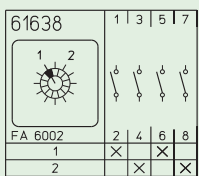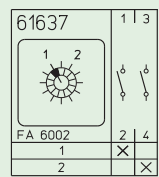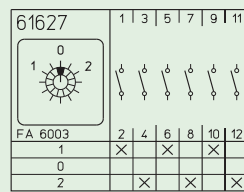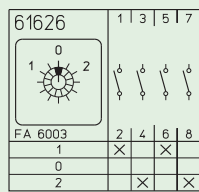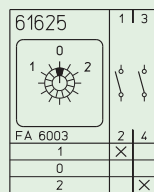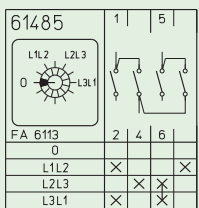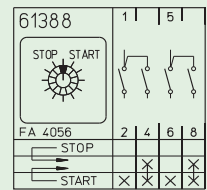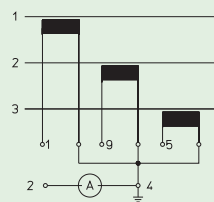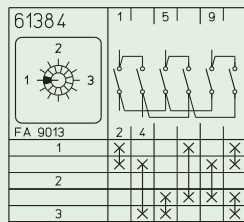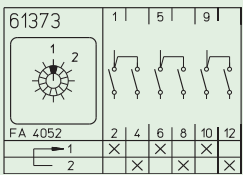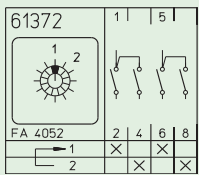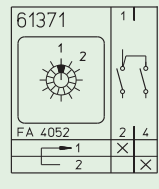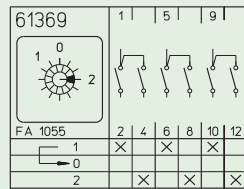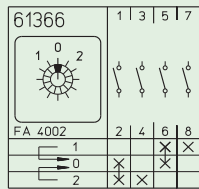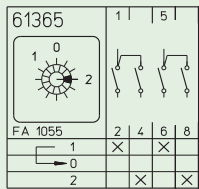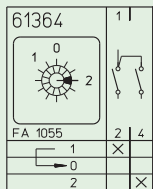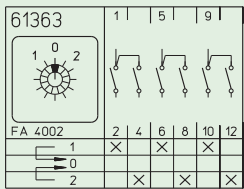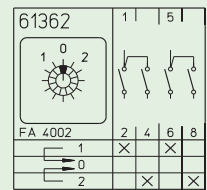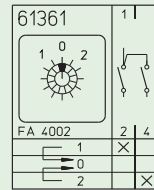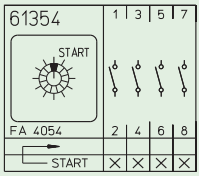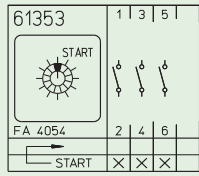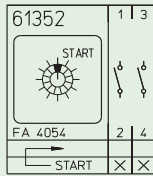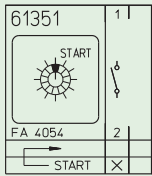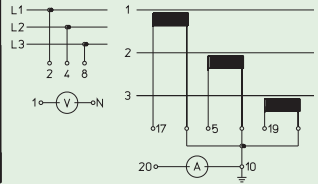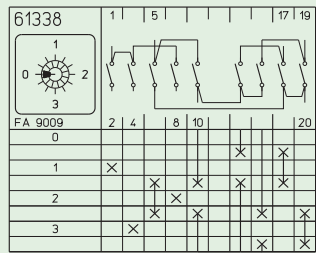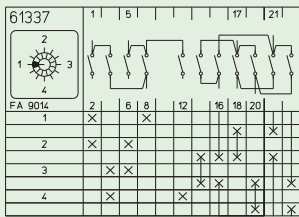

Schaltbilder 61737–61932

